

3. Replace the access panel by snapping into place and installing the retaining screw, and turning 90° clockwise.

Check the vertical beam angle by reversing the vehicle backwards 12 ft. (3.6 m) and repeating the check procedure. The beam height should have reduced by 1 in (25 mm).

## Door Window Reset

If power to the electric windows has been interrupted for any reason, they will fail to operate correctly until reset.

1. Sit in the driver's seat. Close both doors and switch the ignition to '0'.
2. Press firmly and hold the window switch until the window is at the maximum down position. Continue to hold the button for 5 seconds then release.
3. Pull back and hold the window switch until the window is in the maximum up position. Continue to hold the switch for a further 5 seconds, then release.
4. The window is now reset. Repeat for the second window.

## Bodywork and Fittings

### Checks and Maintenance

#### Door drain holes

Check the drain holes in the bottom face of each door periodically and clear if necessary with, i.e. a short length of wire or a pipe cleaner.