


6. Install the door outer weather strip.

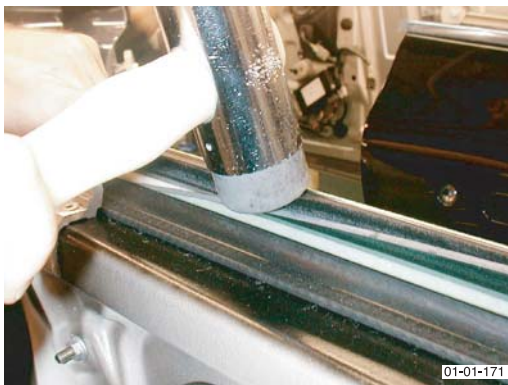

7. Connect the vehicle battery.
8. Check that the door glass operates correctly. Perform the 'Door glass Setup' procedure.

Door Glass Setup

1. Sit in the driver's seat.
2. Ensure both doors are closed and switch the ignition to '0'.
3. Press firmly and hold the window switch until the window is at the maximum down position. Continue to hold the button for 5 seconds then release.
4. Pull back and hold the window switch until the window is in the maximum up position. Continue to hold the switch for a further 5 seconds, then release.
5. The window is now reset. Repeat for the second window.