


## Trip Meter

Shows distances travelled since last reset of trip meters T1 and T2. Toggle between T1 and T2 by pressing (B) for less than 3 seconds. Press (B) for more than 3 seconds to reset the trip meter on display.

## Display Units

Press (C) and (D) together for 5 seconds to change the trip computer display units.

*The display will always return to the default display units when the ignition is switched off.*

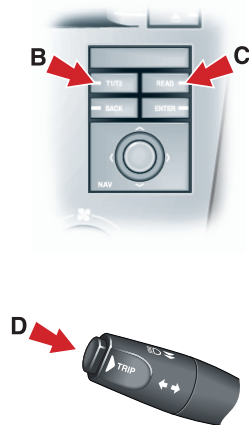

## Cruise Control (Option)


Cruise control can be used to maintain a selected vehicle speed, above 15 mph (24 km/h), without having to use the accelerator.

(A) **RES** - Resume the set speed retained in memory.

(B) **SET '+' / '-'** - Set the speed or accelerate / decelerate.

(C) **On / Off** - Switches cruise control On / Off.

(D) **CAN** - Cancels cruise control but retains the set speed in memory.

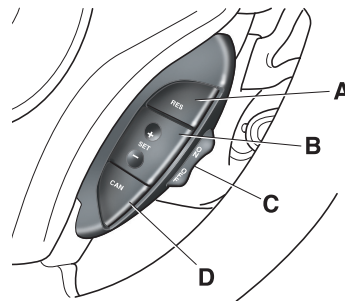

## Cruise Control On /Off

Use the 'On / Off' switch (C) to activate / deactivate the cruise control option. Under certain conditions cruise control will automatically switch off (Refer to 'Cruise Control Automatic Switch Off', page 4-18). When cruise control is active 'Cruise' will show in the message display (left) (Refer to 'Instrument Cluster', page 4-3).

## Setting Vehicle Speed

**Warning**  
*Only use cruise control when conditions are favorable, for example, straight, dry, open roads with light traffic.*

When travelling at the desired speed, which must be above 15 mph (24 km/h), press the '**SET**' (+ or -) button (B). Cruise control will engage and maintain that speed without the need to use the accelerator pedal.

*Cruise control will automatically disengage when the brake pedal is pressed or when the vehicle speed falls below 15 mph (24 km/h).*