

Trip Meter

Shows distances travelled since last reset of trip meters T1 and T2. Toggle between T1 and T2 by pressing (B) for less than 3 seconds. Press (B) for more than 3 seconds to reset the trip meter on display.

Display Units

Press (C) and (D) together for 5 seconds to change the trip computer display units.

The display will always return to the default display units when the ignition is switched off.



Cruise Control (Option)


Cruise control can be used to maintain a selected vehicle speed, above 15 mph (24 km/h), without having to use the accelerator.

(A) **RES** - Resume the set speed retained in memory.

(B) **SET '+' / '-'** - Set the speed or accelerate / decelerate.

(C) **On / Off** - Switches cruise control On / Off.

(D) **CAN** - Cancels cruise control but retains the set speed in memory.

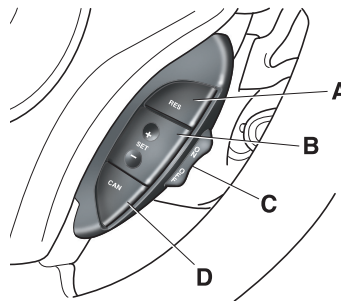

Cruise Control On / Off

Use the 'On / Off' switch (C) to activate / deactivate the cruise control option. Under certain conditions cruise control will automatically switch off (Refer to 'Cruise Control Automatic Switch Off', page 4-18). When cruise control is active 'Cruise' will show in the message display (left) (Refer to 'Instrument Cluster', page 4-3).

Setting Vehicle Speed

⚠ Warning ⚠

Only use cruise control when conditions are favorable, for example, straight, dry, open roads with light traffic.

When travelling at the desired speed, which must be above 15 mph (24 km/h), press the '**SET**' (+ or -) button (B). Cruise control will engage and maintain that speed without the need to use the accelerator pedal.

Cruise control will automatically disengage when the brake pedal is pressed or when the vehicle speed falls below 15 mph (24 km/h).